







Note: Polyurethane spring seat upper bushings must be fitted to both sides of the vehicle.

- 1. Support the vehicle on jack stand/hoist and remove the front wheels.
- 2. Remove the front upper arm outer nut (ball joint side) from the steering knuckle.
- 3. Remove the front strut assembly from the vehicle.
- 4. Note the orientation of the top strut mount.
- 5. With the aid of a spring compressor disassemble the strut and separate the top strut mount assembly.
- 6. Clean up contact areas and replace the spring seat upper bush.
- 7. Reassemble the top mount assembly in reverse order, ensure it is orientated as per original.
- 8. Refit the completed front strut assembly into the vehicle.
- 9. Tighten all fasteners to manufacturer's torque setting and carry out a wheel alignment.